

# **Installation Instruction**


## **LED Canopy**


### SSL-CP5/SQ


#### Ceiling Installation

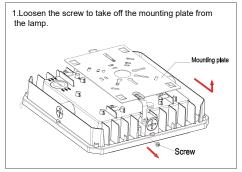

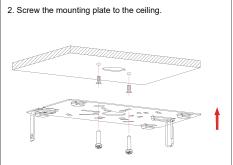


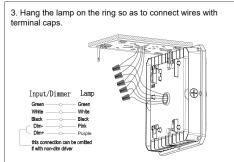


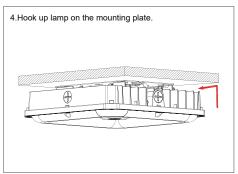

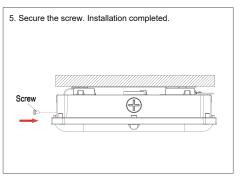

#### Pole-pendant Installation

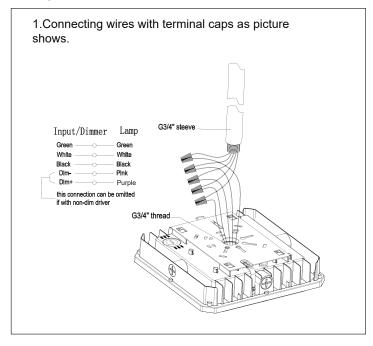


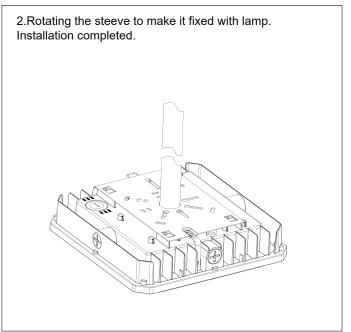



# **Installation Instruction**

## **LED Canopy**

## Plug sensor installation

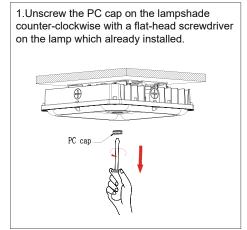


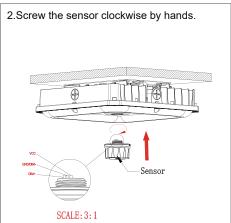

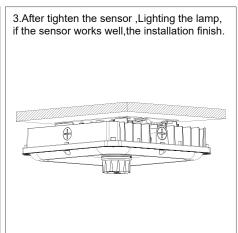


## Function of CCT and power Selective


1.Before installation,unscrew the M25 cap counter-clockwise at the back of the lamp by solt type screwdriver.

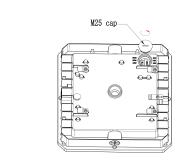

2.According to the tags,customer can select the corresponding power and CCT dip switch, dial to the required power(40w/60w/80w) and CCT(35K/40K/50K).

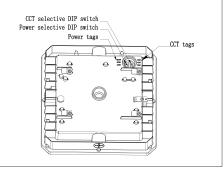


3.After finish the requires power and CCT adjustment, Tighten the M25 cap clockwise by slot type screwdriver.

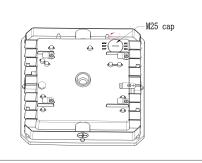


## **LED Canopy**


### SSL-CP5/RD


#### Ceiling Installation

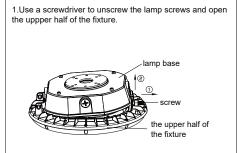





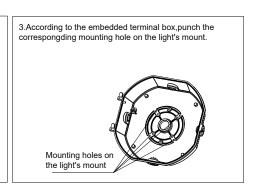


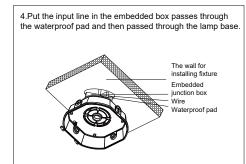

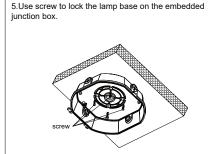

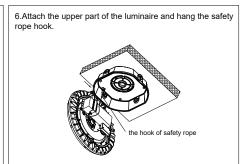

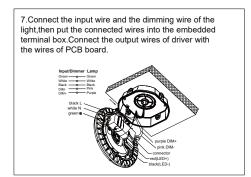

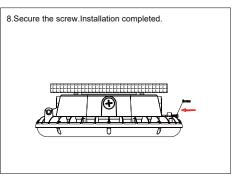



SSL-CP5/RD

## **Installation Instruction**


## **LED Canopy**


#### Pole-pendant Installation

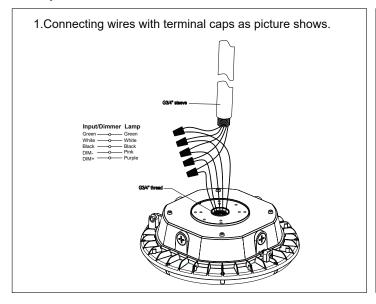


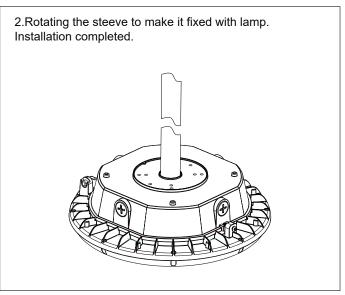

## Plug sensor installation

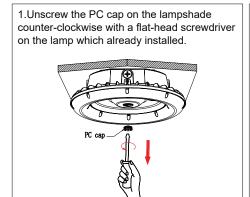


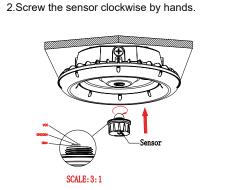

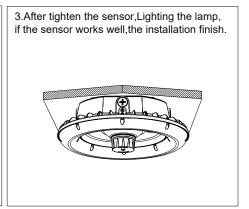


## Function of CCT and power Selective

Before installation, unscrew the M26 cap counter-clockwise at the back of the lamp by solt type screwdriver.

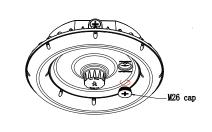

2.According to the tags, customer can select the corresponding power and CCT dip switch, dial to the required power(40w/60w/80w) and CCT(35K/40K/50K).

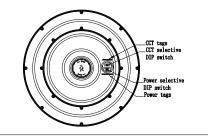

3.After finish the requires power and CCT adjustment, Tighten the M26 cap clockwise by slot type screwdriver.

