

# LED FIXTURE

TL Series



## LED Emergency Remote Head TL-EM002-WL, TL-EM003-WL

Injection-molded thermoplastic housing  
Wet location rated



2-year limited warranty

Operating temperature range -20 °C ~ +40 °C



TL-EM003-3W-WL



TL-EM002-6W-WL

### Features & Benefits

Injection-molded thermoplastic housing

UL-94V-0 flame rating, fire-retardant

Universal (wall, ceiling) mounting

6-24VDC input voltage, 6500K


2 LED lamp heads (TL-EM002)  
1 LED lamp head (TL-EM003)

CRI ≥82, Beam Angle 25°

cUL Listed

IP65, Wet Location Rated

### Dimensional Drawing

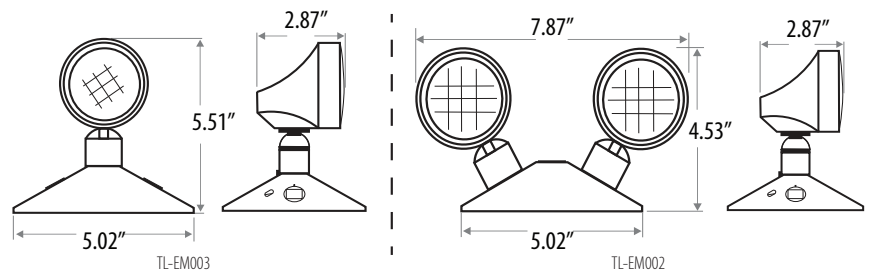

### Ordering Information Example: TL-EM002-6W-WL

Family Name	Fixture Type	Model	Wattage	Location Rating
TL (Turolight)	EM (Emergency light)	002 (LED Emergency 2 Remote Heads)	6W (3W x 2)	WL (Wet Location Rated)
		003 (LED Emergency 1 Remote Head)	3W	


### Product Specification

Ordering Code	Model Number	Description	Wattage (W)	Input Voltage (V)	CCT (K)	Initial Delivered Lumens (lm)	Hour Rating (hrs)	CRI	Mounting	Remote Capable	Wet Location	Case QTY.
3465129	TL-EM002-6W-WL	LED Emergency 3W x 2 remote heads	6W	6-24VDC	6500	330	50,000	82	Wall, ceiling	Yes	Yes	20
3465130	TL-EM003-3W-WL	LED Emergency 3W x 1 remote head	3W	6-24VDC	6500	165	50,000	82	Wall, ceiling	Yes	Yes	20

# LED Emergency Remote Head

## TL-EM002-WL, TL-EM003-WL

### Installation location

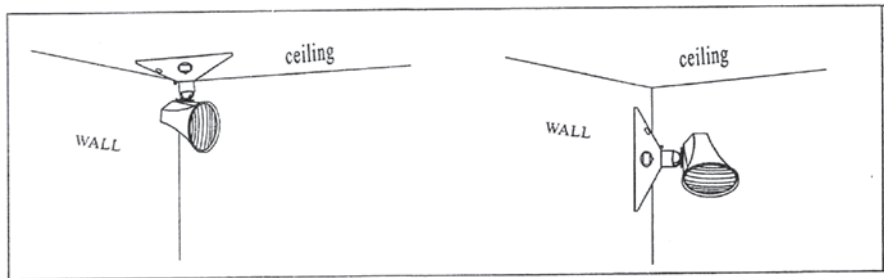

### Attention

#### Important Safeguards

- When using electrical equipment, basic safety precautions should always be followed, including the following:
1. Read and follow all safety instructions.
  2. Do not let power cords touch hot surfaces.
  3. Do not install near gas or electric heaters.
  4. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition and will void the unit's warranty.
  5. Save these instructions for future reference.
  6. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
  7. Servicing of this equipment should be performed by qualified service personnel.
  8. Do not use this equipment for other than its intended purpose.
  9. Do not use outdoors.

### Operation instructions

#### Installation (Fig.1)

1. Make wire connections. Observe polarity (if required); connect the lamp to the DC supply wires; Positive and negative wires are identified with labels on each wire (when indicated).
2. Install the canopy to the Junction Box with the Mounting Screws (not included).
3. Install the lamp(s) gently to avoid breaking the pins.
4. Apply power.

#### Head Adjustment (Fig.2)

**Rotation** - To rotate the heads, unscrew the set nut of the base attached under the canopy, enough to let you rotate the heads to the desired position. Tighten the set nut gently to fix the position of the heads.

**Warning!** Tightening the set nut too hard can break the head's feet and affect the efficiency of the product.

**Tilt** - To tilt the heads, hold and tilt up or down to the desired position.

