

LED FIXTURE

TL Series



Metal Battery Pack TL-EMRM

Steel housing battery pack



1-year limited warranty

Operating temperature range
5°C ~ +35°C



Features & Benefits

Steel housing, UL-94V-0 flame rating, fire-resistant

Input Voltage: 120 / 347V With 2x5W 6500K heads

24V / 12V / 6V sealed lead-acid battery

Test switch and charge indicator light


Not intended for outdoor use

Wall mounting, remote capable

CSA C22.2 No 141-15

IP20, damp location rated

Dimensional Drawing

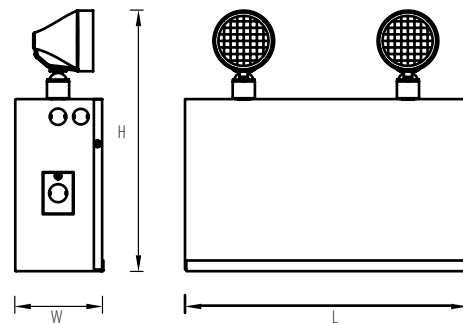

Ordering Information Example: TL-EMRM/34W/6VDC/2-5W/120/347V

Family Name	Fixture Type	Wattage	Load Voltage	LED Heads	Input Voltage
TL (Turolight)	EMRM (Emergency remote)	34W 72W, 95W, 140W, 275W 144W, 320W	6VDC 12VDC 24VDC	2-5W (With 2x 5W LED heads)	120/347V

Product Specification

Ordering Code	Model Number	Description	Wattage (W)	Input Voltage (V)	LED Heads	Emergency Run Time (Min)	Mounting	Remote Capable	Damp Location	Dimensions LxWxH (inch)	Case QTY.
3466203	TL-EMRM/34W/6VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 34W, 6VDC, 120/347V	34	120/347V	2	30	Wall	Yes	Yes	11.81"×2.95"×9.72"	4
3465140	TL-EMRM/72W/12VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 72W, 12VDC, 120/347V	72	120/347V	2	30	Wall	Yes	Yes	12.20"×2.76"×10.63"	5
3466204	TL-EMRM/95W/12VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 95W, 12VDC, 120/347V	95	120/347V	2	30	Wall	Yes	Yes	12.20"×2.76"×10.63"	5
3466205	TL-EMRM/140W/12VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 140W, 12VDC, 120/347V	140	120/347V	2	30	Wall	Yes	Yes	13.50"×4.21"×12.52"	2
3466206	TL-EMRM/275W/12VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 275W, 12VDC, 120/347V	275	120/347V	2	30	Wall	Yes	Yes	15.28"×4.21"×13.70"	1
3466207	TL-EMRM/144W/24VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 140W, 24VDC, 120/347V	140	120/347V	2	30	Wall	Yes	Yes	13.90"×3.11"×13.40"	1
3466208	TL-EMRM/320W/24VDC/2-5W/120/347V	Metal Battery Pack (c/w 2x5W Heads) 320W, 24VDC, 120/347V	320	120/347V	2	30	Wall	Yes	Yes	16.40"×3.66"×16.77"	1

Emergency Runtime Charts

TL-EMRM/34W/6VDC/2-5W/120/347V				TL-EMRM/72W/12VDC/2-5W/120/347V				TL-EMRM/95W/12VDC/2-5W/120/347V				TL-EMRM/140W/12VDC/2-5W/120/347V				TL-EMRM/275W/12VDC/2-5W/120/347V				TL-EMRM/144W/24VDC/2-5W/120/347V				TL-EMRM/320W/24VDC/2-5W/120/347V			
Emergency Run Time in Minutes	Wattage	No. of Heads		Emergency Run Time in Minutes	Wattage	No. of Heads		Emergency Run Time in Minutes	Wattage	No. of Heads		Emergency Run Time in Minutes	Wattage	No. of Heads		Emergency Run Time in Minutes	Wattage	No. of Heads		Emergency Run Time in Minutes	Wattage	No. of Heads		Emergency Run Time in Minutes	Wattage	No. of Heads	
	2W	5W		2W	5W			2W	5W			2W	5W			2W	5W			2W	5W			2W	5W		
30	34	12	4	30	72	31	12	30	95	42	17	30	140	65	26	30	275	132	53	30	144	67	28	30	320	155	62
60	25	7	3	60	56	23	9	60	75	32	13	60	90	40	16	60	200	95	38	60	80	35	16	60	210	100	40
90	18	4	1	90	45	17	7	90	60	25	10	90	70	30	12	90	140	65	26	90	50	20	10	90	150	70	28
120	12	1	-	120	30	10	4	120	40	15	6	120	50	20	8	120	100	45	18	120	30	15	6	120	90	40	16

* Actual wattage loads may be affected by length and gauge of the wire runs used to connect the remote heads.

* It is recommended to load battery pack 20% under their maximum load.