

Installation Instruction

NEBULUM 4" Cylinder Fixture – Surface ceiling installation

Applicable models:
NBLM4-CYL-S-KIT-WH
NBLM4-CYL-S-KIT-BK

ELECTRICAL SHOCK HAZARD



WARNING


Disconnect the Electrical supply at the service panel (fuse or circuit breaker box). Failure to do so could result in serious injury.

Only qualified electricians should install this luminaire and Must conform to the Canadian Electrical Code Part 1 or the NEC, and any local codes and ordinances. Ensure that only proper tools and materials to complete the installation are available prior to attempting to install this luminaire.

Read all instructions prior to installing this product.


This unit is intended to be installed as either a Surface mount or Pendant mount depending on selected version.

Follow directions closely. Wattage selection for MW units is located inside the main cylinder housing compartment.

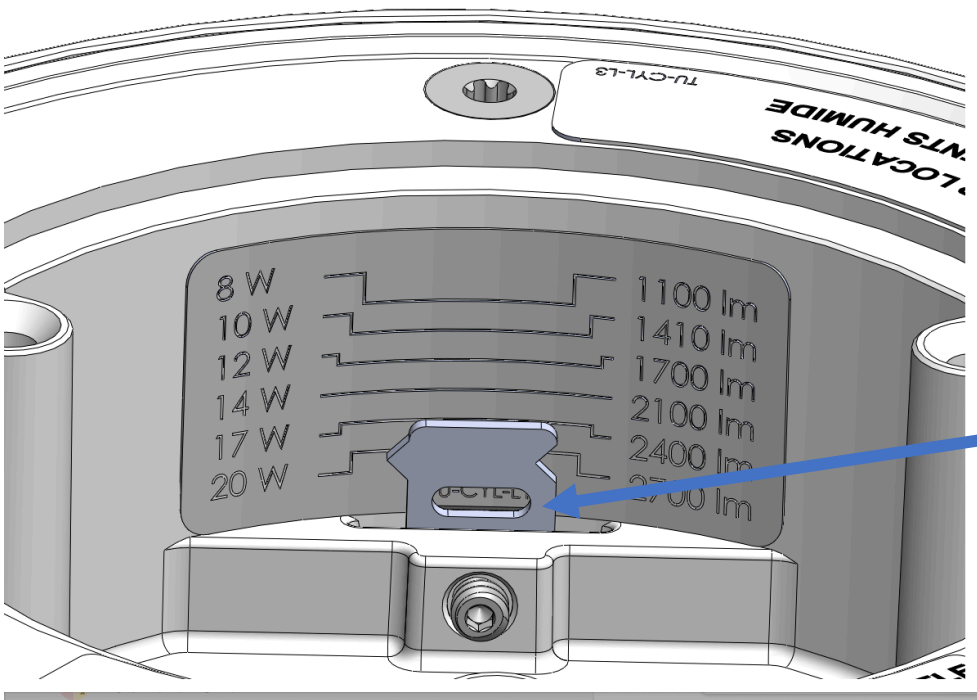


Loosen locking set screw, Insert a small screwdriver into the slot a adjust to selected output wattage.

BLACK	HOT
WHITE	NEUTRAL
GREEN	GROUND
PURPLE	DIM (+) 0-10V
PINK	DIM (-) 0-10V

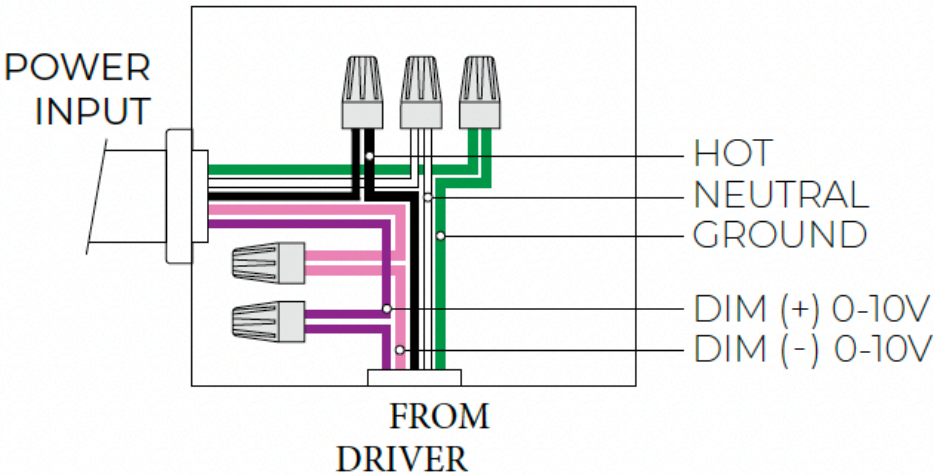


Nebulum 4 Cylinder Fixtures - Surface ceiling installation NBLM4-CYL-S-KIT-WH or NBLM4-CYL-S-KIT-BK

The surface mount kit comes with Wiring harness, Octagon box mounting plate and surface mount ceiling adapter ring.

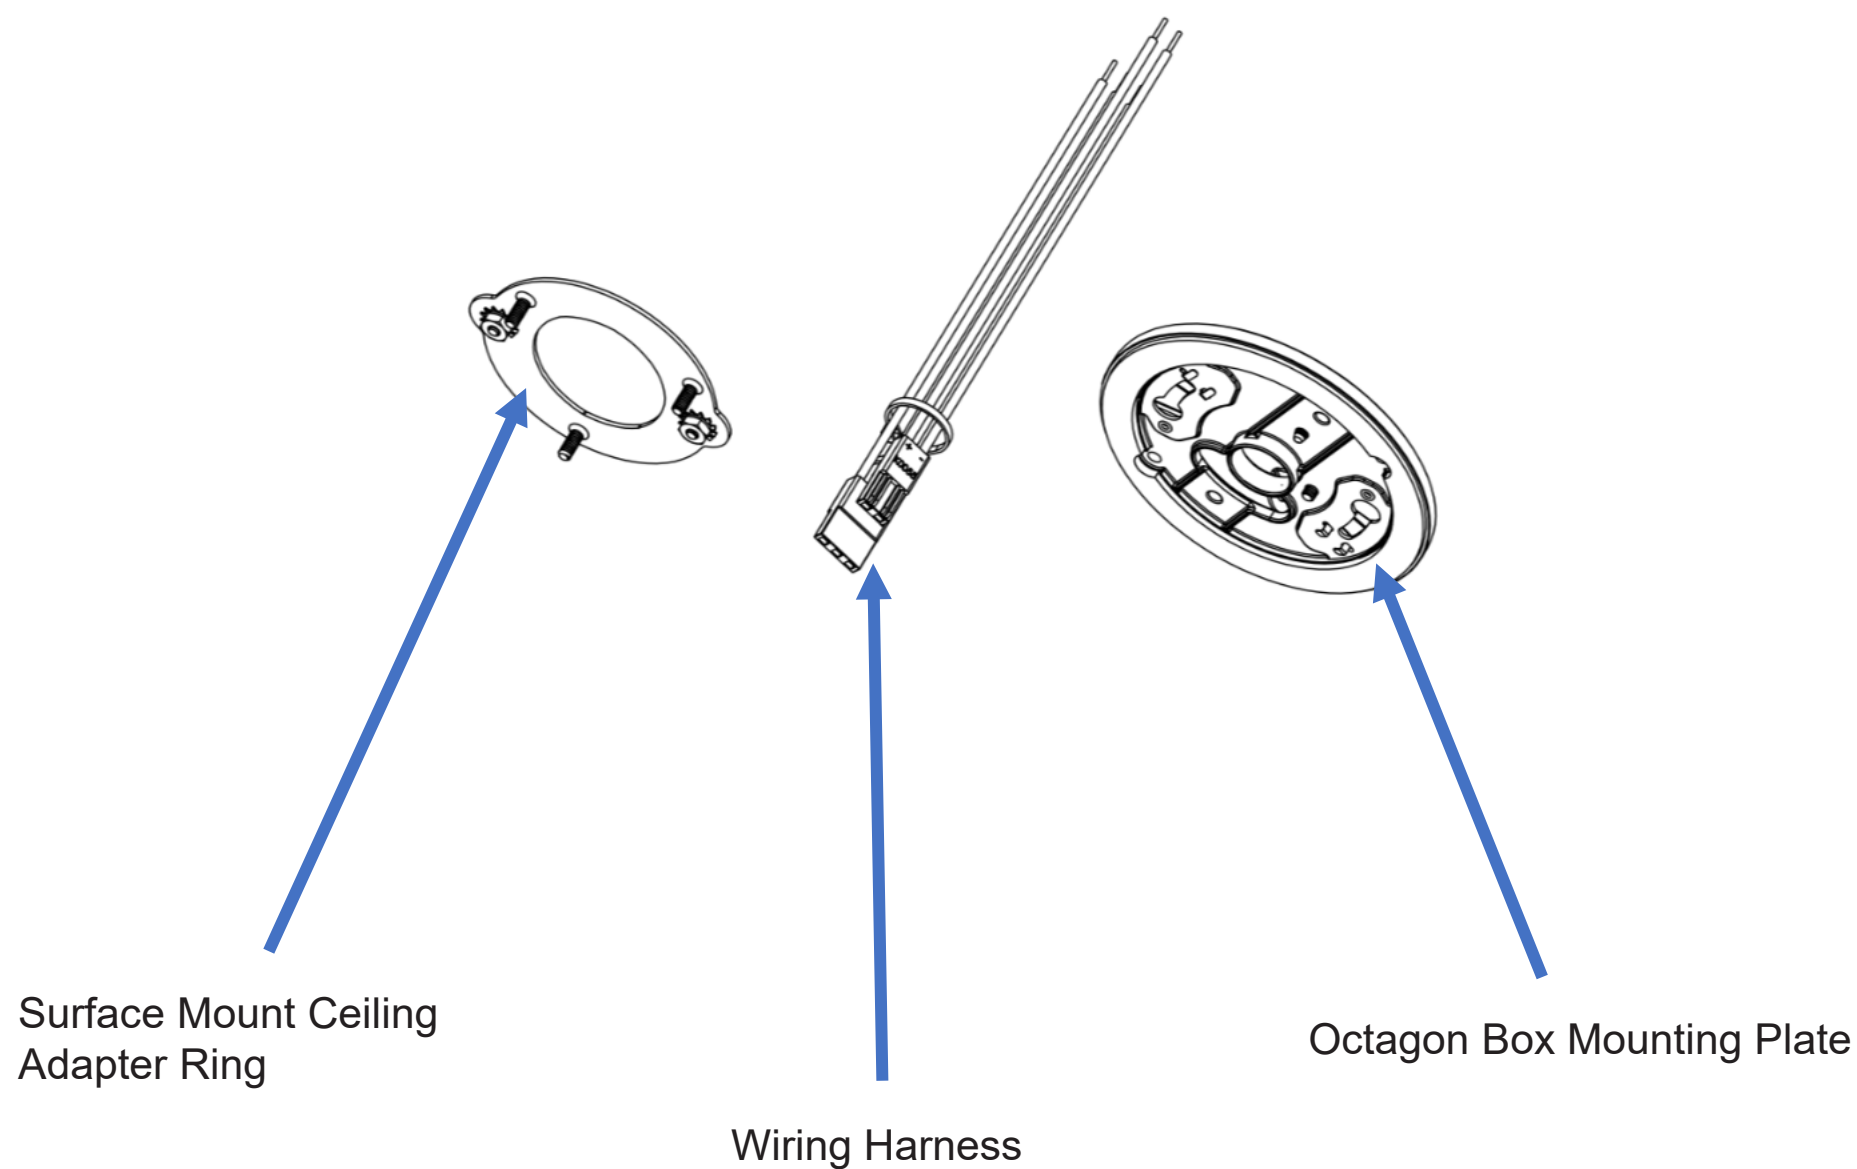


Installation steps:

1. Pass wire harness through Octagon box mounting ring as shown below and connect with wires in the junction box.
2. Fasten octagon box mounting ring to octagon box using the existing box mounting screws

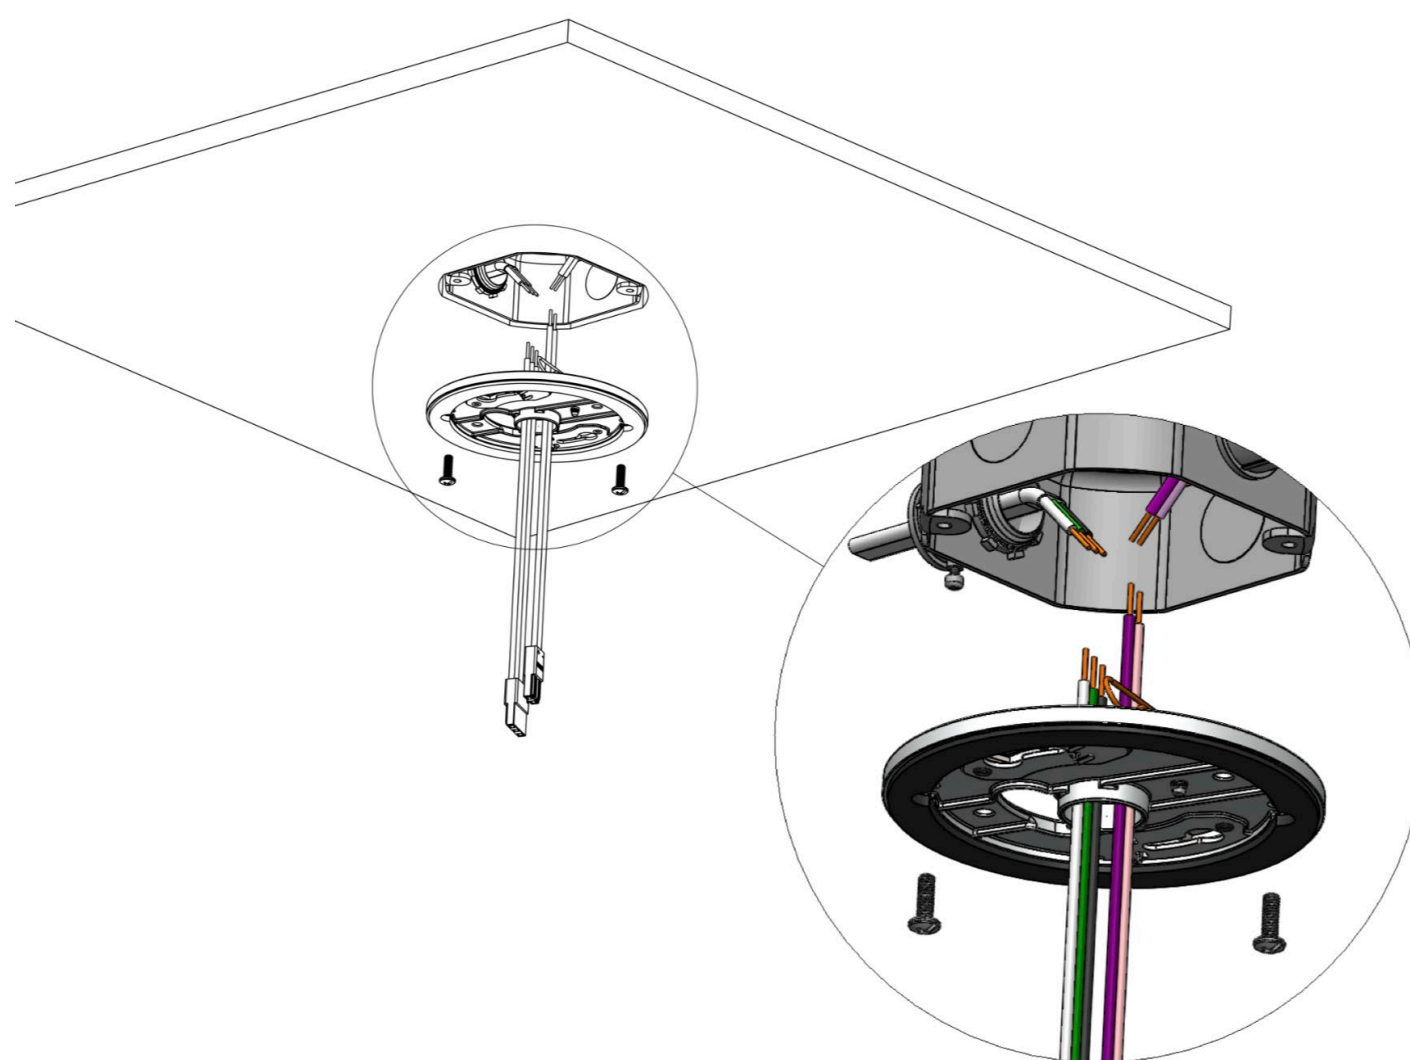


Nebulum 4 Cylinder Fixtures - Surface ceiling installation NBLM4-CYL-S-KIT-WH or NBLM4-CYL-S-KIT-BK

3. Install Cylinder mounting ring on the back of the cylinder using 3 screws provided, make sure to pass the harness connection and safety lanyard through the large center hole.

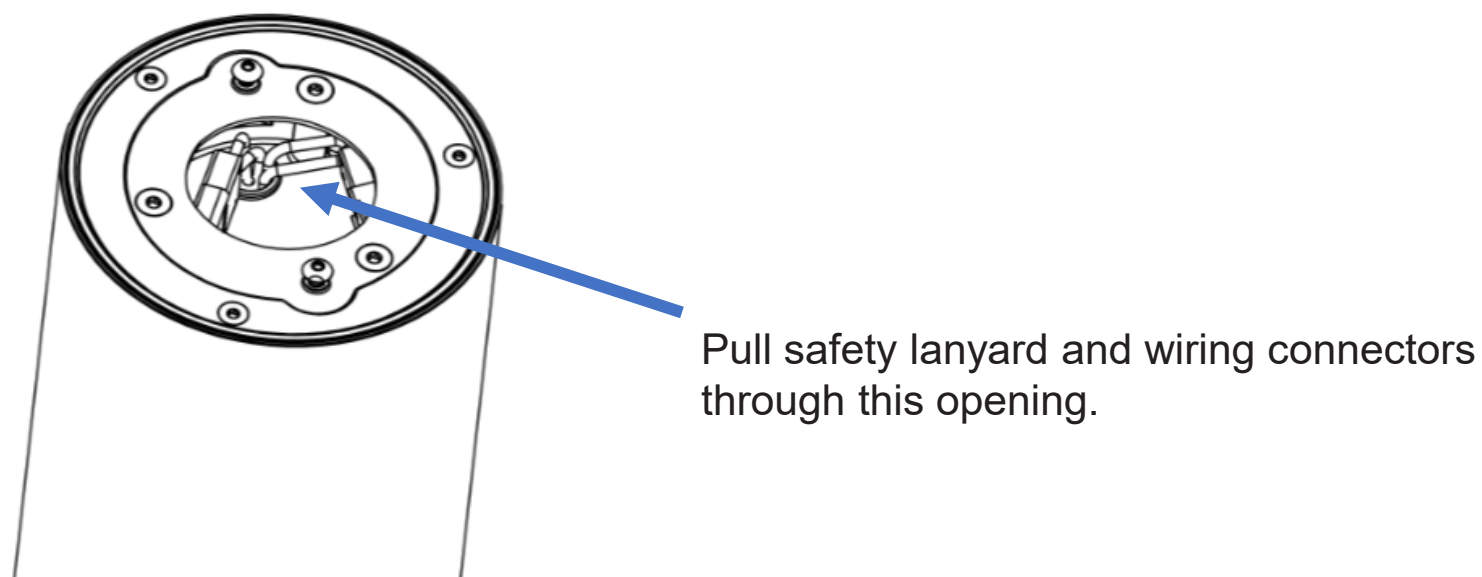


4. Attach the safety lanyard from the cylinder to the retention loop on the octagon box ring as shown below.

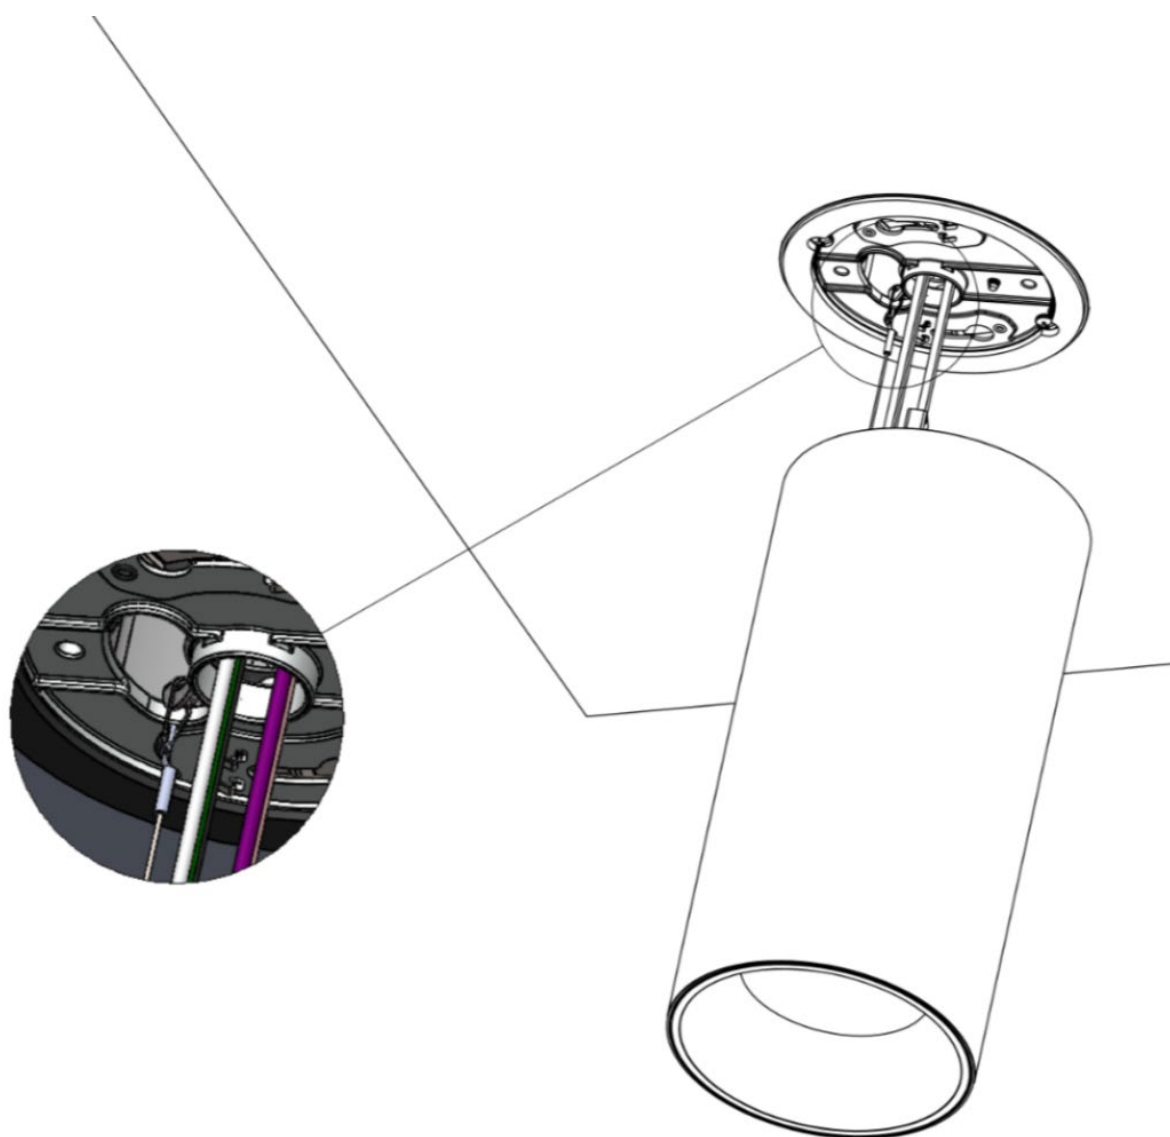

Nebulum 4 Cylinder Fixtures - Surface ceiling installation NBLM4-CYL-S-KIT-WH or NBLM4-CYL-S-KIT-BK

5. Connect the wire harness together and feed into the back of the cylinder compartment.

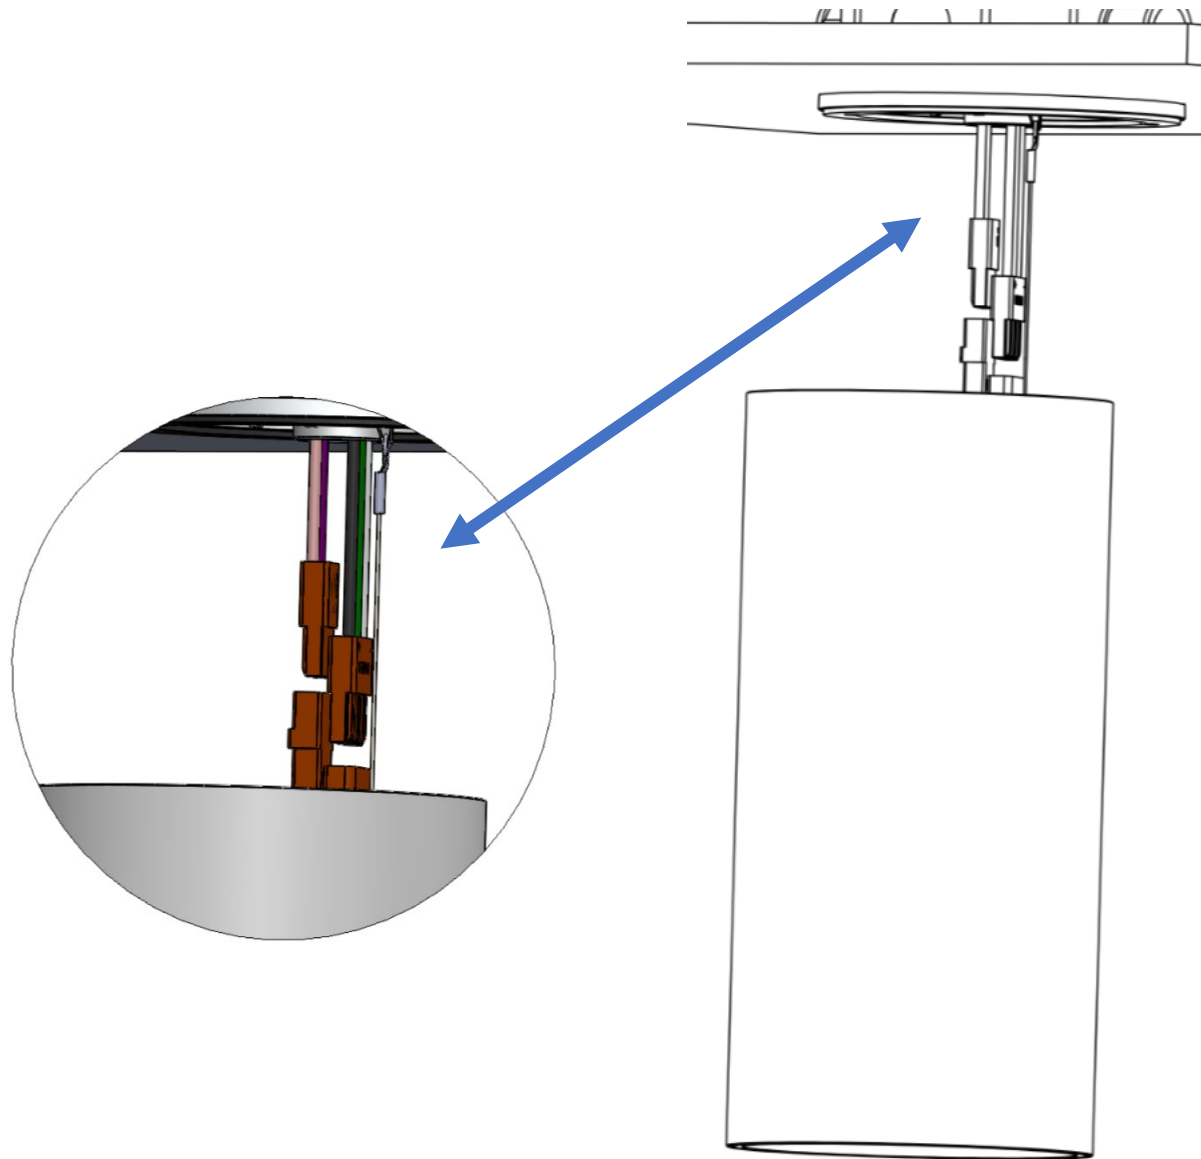

6. Align the cylinder retention screws with the locking key slots on the octagon ring. Push up and rotate the cylinder to lock to the plate. (you will feel a click)

